

For Refilling the Epson C70 / C80 / C82 / Photo 950 / Photo 2100 Cartridges

- 1) Remove the cartridge to be filled from the printer.
- 2) It is advisable to reprogram the chip prior to refilling
- 3) Drill a hole with a small drill bit in the centre of the cartridge near the front (as shown in the photograph).
- 4) Drill a second hole immediately behind the first hole, this is to allow the air to escape out of the cartridge while refilling.
- 5) Draw up 25ml of ink for the black or 10ml of ink for the colours into the syringe
- 6) Insert the syringe into the first hole. It will only penetrate 1/4 inches into the cartridge.
- 7) VERY SLOWLY inject the ink into the cartridge. If you do not inject slowly, you will introduce air into the cartridge which will reduce the quality of the printout.
- 8) Once you have finished refilling, you may seal the holes you drilled in step 2 and 3.
- 9) Return the cartridge to the printer.
- 10) It may be necessary to run a couple of "Clean Print Head" cycles.
- 11) If the quality is still low wait 24 hours before continuing to print.

